



**4.1 ENGINE**

For maintenance procedures, refer to ENGINE OPERATION AND MAINTENANCE MANUAL.

**4.2 ELECTRICAL ARRANGEMENT**

Batteries installed are maintenance free. Check for proper operation by alternating the selected battery for starting the engine. Poor performance or non starting of the engine indicates that the selected battery is weak or defective, recharge the battery. After recharging, the engine cannot started or there is some defective with the battery. The battery should be replaced for a new one.