


|                      |                              |             |             |
|----------------------|------------------------------|-------------|-------------|
|                      |                              | H17/28      | Page<br>2/2 |
| Fuel Injection Valve | Assembly Drawing & Part List | Section No. | Rev.        |
| 연료 분사 밸브             | 조립도 및 부품 목록                  | S52000      | 1A          |

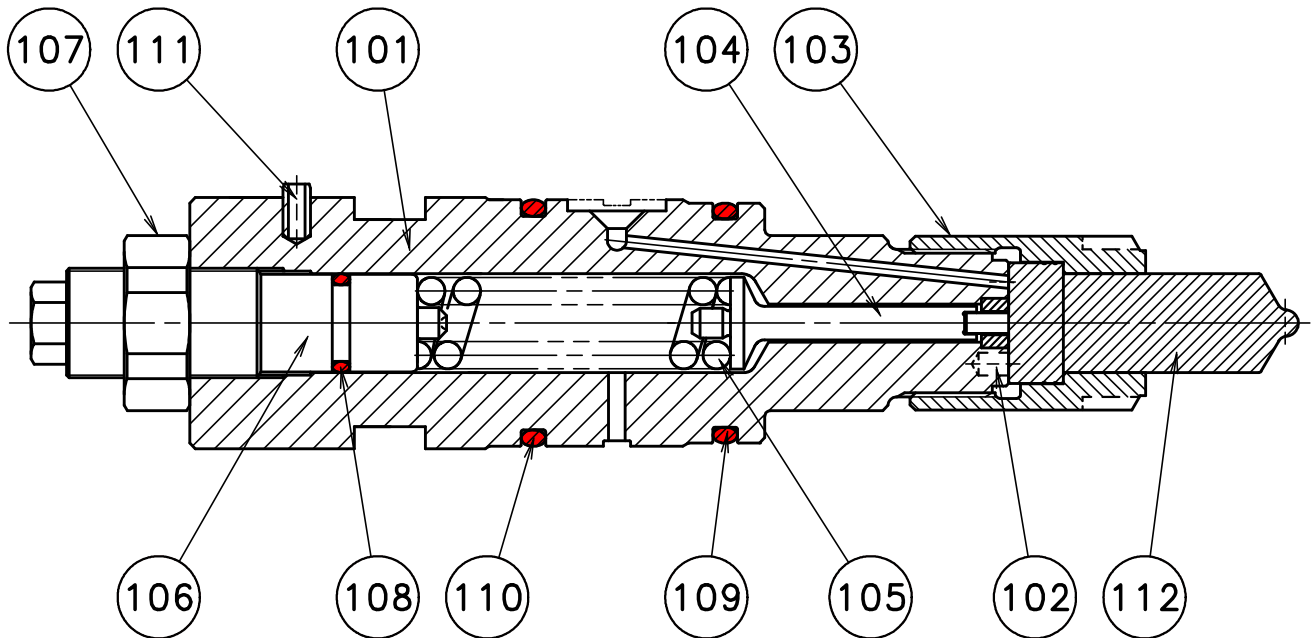

## Part List

| Item No. | Description               | Q'ty / Eng. | Weight (kg) | Remarks / See Note |
|----------|---------------------------|-------------|-------------|--------------------|
| 101      | Fuel injection valve body | 1           |             |                    |
| 102      | Dowel pin                 | 2           |             |                    |
| 103      | Nozzle nut                | 1           |             |                    |
| 104      | Spindle                   | 1           |             |                    |
| 105      | Spring                    | 1           |             |                    |
| 106      | Adjust screw              | 1           |             |                    |
| 107      | Nut                       | 1           |             |                    |
| 108      | O-ring                    | 1           |             |                    |
| 109      | O-ring                    | 1           |             |                    |
| 110      | O-ring                    | 1           |             |                    |
| 111      | Spring pin                | 1           |             |                    |
| 112      | Atomizer                  | 1           |             |                    |