 
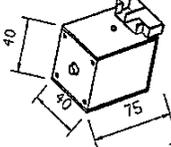
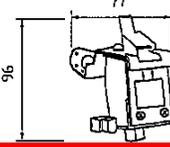
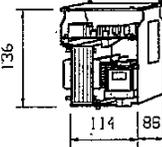
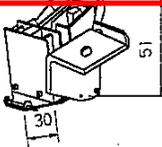
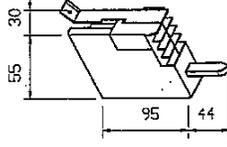
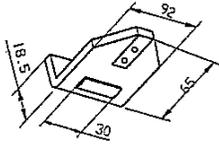
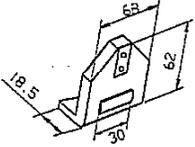
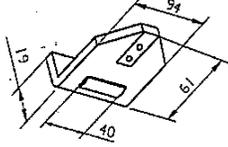
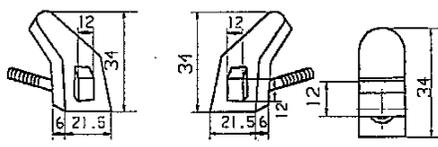


SPARE PARTS LIST OF HAT TYPE ACB

NO	NAME OF PART	OUT-LINE	QUANTITIES			REMARKS PART NO.
			WORKING		SPARE	
			PER SET	PER VESS		
11	AUXILARY RELAY DK-2 (AC200-230V)		1	3	1	5834990777 DK-2S220A
12	MAGNET HOLD TRIGGER		1	4	1	5832735700 BTTCC00001A-3
13	VOLTAGE TRIP DEVICE AVT-1-B (AC421-480 V, 50/60Hz)		1	/	1	9441413000 BTVB0004A1-4
14	UVT TRIP COIL HATS-T(U) (AC220V-240V)		1	3	1	5833576700 BTUB0011A1-3
15	CHARGE UP SW. HATS-CS (3a 3b)		1	3	1	5836011393 BTXC0005A3-4
16	POSITION SWITCH		1	3	1	3243614700 BTLC0003A1-3
17	FIX ARCING CONTACT 32		3	/	3	3223041978 4AT-03342
18	FIX ARCING CONTACT 25		3	6	3	3223041977 4AT-03341
19	FIX ARCING CONTACT 40		3	3	3	9554027000 4AT-03343
20	MOVING ARCING CONTACT 40		3	3	3	3223031000 4AT-03389
			3	3	3	3223032000 4AT-03395
			3	3	3	3223030000 4AT-03398
			3	3	3	