



SPARE PARTS

7.5 HYDRAULIC MOTOR

7.5.1 Parts list and exploded view

Item	Article No	Name	Material	Qty
0	1800-09950	Hydraulic motor assembly		1
1	1800-09546	External flange assembly		1
2	1800-09660	Piston/driving shaft assembly	(See 7.5.2)	1
3	1800-09654	Driving shaft assembly	(See 7.5.3)	1
4	1800-09727	Internal flange assembly		1
12	1800-07751	Slide valve		1
14 A/B	1800-06201	Pin		2
15	1800-05221	O-ring		1
16	1800-05211	O-ring		1
17	1800-08751	Motor liner		1
38	1800-08950	Relay		2
39	1800-06350	Spring		2
40	1800-06012	Plug		2
41	1800-05203	O-ring		2
42	1800-05107	Gasket		2
43	1800-07067	Inlet column		1
44	1800-05106	Gasket		1
45	1800-07065	Outlet column		1
46	1800-05105	Gasket		1
47	1800-06440	Screw		2
48	1800-06155	Washer		2
49	1800-01305	Motor cover		1
50	1800-06421	Screw		2
51	1800-00186	Washer		2
52	1800-06154	Washer		2
53	1800-07617	Operating indicator		1
54	1800-06324	Nut		1
55	1800-06171	Washer		1
56	1800-05482	O-ring		1
57	1800-05480	O-ring		1
58	1800-05211	O-ring		1
61	1800-00153	Pluger		1
62	1800-05004	Gasket		1

SPARE PARTS

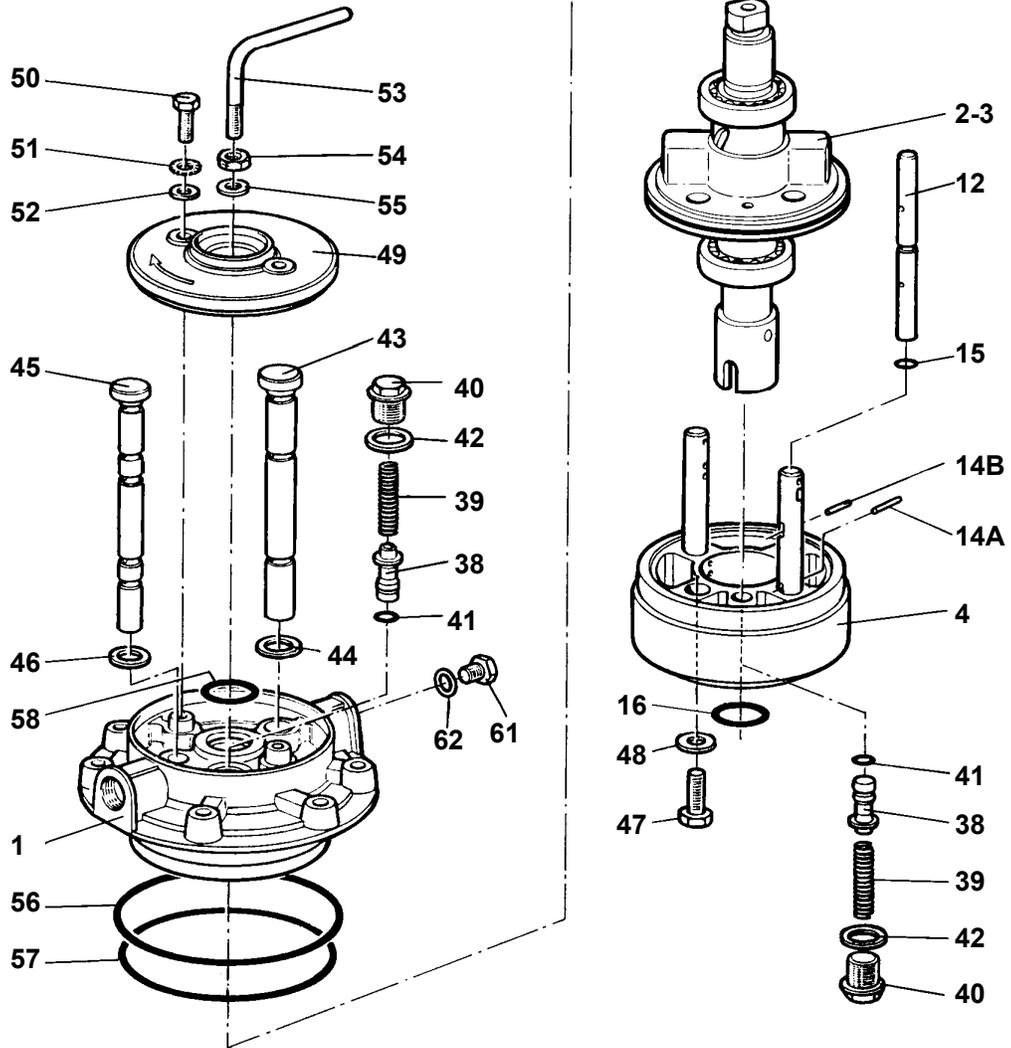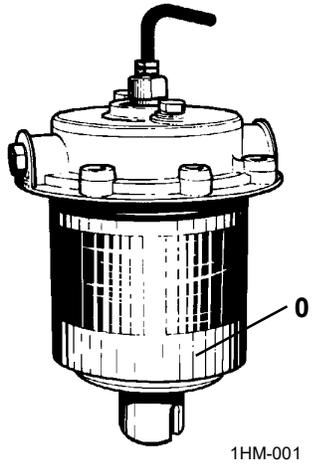

1HM-046

Hydraulic motor